

With the Vari-Grind 2 there are now two ways of setting the angle of the adjusting leg. Method 1 is the graduations on the back of the toolholder and are covered in the instructional DVD.

Method 2 uses the serrations cut on the side of the pivot holder. Put the gouge to be sharpened into the holder and lay the gouge into the front restraining notch and also into the back restraining notch. Pull the Vari-Grind 2 back as far as it will go as shown in the picture. Loosen the adjusting rod so it can be moved in slot and then rotate the Vari-Grind 2 so that the adjusting rod engages the serrations. With a bit of wiggling you can get the adjusting rod firmly seated into the serration of your choice and then tighten the adjusting rod. Pay attention that you keep the rod in the serration as you tighten as tightening can change the position of the adjusting rod.

